

## Add on Module

# STARWATCH ELEVATOR STANDARD

STARWATCH ELEVATOR STANDARD is designed to provide a higher level of security by integrating elevator control with access control. This software can be operated added on to the access control management software.



## ❖ System Requirements

CPU	Pentium 4 or Higher
RAM	1GB or Higher
HDD	20GB or Higher
Operating System	Windows XP Windows 2003 Server * 32 Bit Windows
Compatible Controllers	<ul style="list-style-type: none"><li>• Controllers that are compatible with STARWATCH STANDARD</li><li>* Elevator control feature is included in ENTERPRISE Software.</li><li>Controller: iTDC Series, iCON100, LX007 Series, FINGER007 Series, LX505 Series, 505R Series</li><li>Proximity Readers: RF Series, IP Series, SR Series</li><li>Biometric Readers: LX006 Series, FINGER006 Series, FGR006 Series</li></ul>

\*This System does not support Windows 95, 98, ME, 2000 [Professional and Server].

## ❖ System Features

- Management software for prohibiting access to restricted area and for monitoring the user record by the elevator floor button authorization setting
- Elevator floor access authorization setting by user
- Elevator floor access authorization record available for reviewing and printing
- Automatic activation and inactivation of elevator floor buttons by pre-configured time schedule of individual users
- Automatic activation and inactivation of elevator floor buttons by pre-configured time schedule of building floors

## ❖ System Configuration

